



# Wand Company Star Trek Communicator Silver Plate Replacement

Use this guide to replace the middle Silver Plate located within the Wand Company Star Trek Communicator.

Written By: Garret Moses



## INTRODUCTION

This detailed guide will cover the particulars on how to replace the middle Silver Plate in the event that it becomes damaged or bent.

---



### TOOLS:



- [64 Bit Driver Kit](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Silver Plate



- Power off the Star trek Bluetooth Communicator before disassembling.

## Step 2

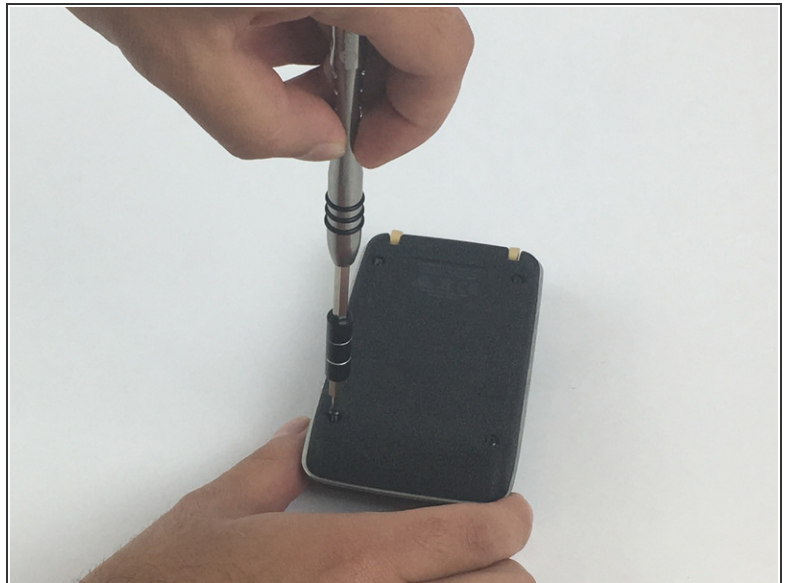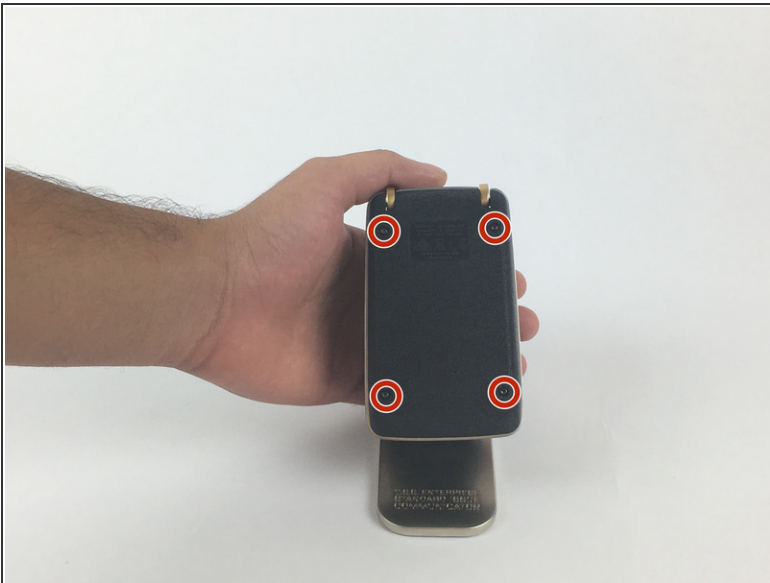

- Remove the four T6 Torx screws (1.70mm) located on the back of the device.
- Remove the black plastic cover by gently pulling it.



## Step 3



- Remove the protective foam located around the speaker and charging magnets.
- ⓘ Be careful not to lose the two magnets located between the microphone and the speaker. The magnets can be easily removed if they come in contact with other magnetic materials.

## Step 4



- Remove the two Phillips PH0 (0.9mm) screws located to the side of each magnet.

## Step 5



- Remove the black cover.



## Step 6



- Remove the protective foam attached to the battery.



## Step 7

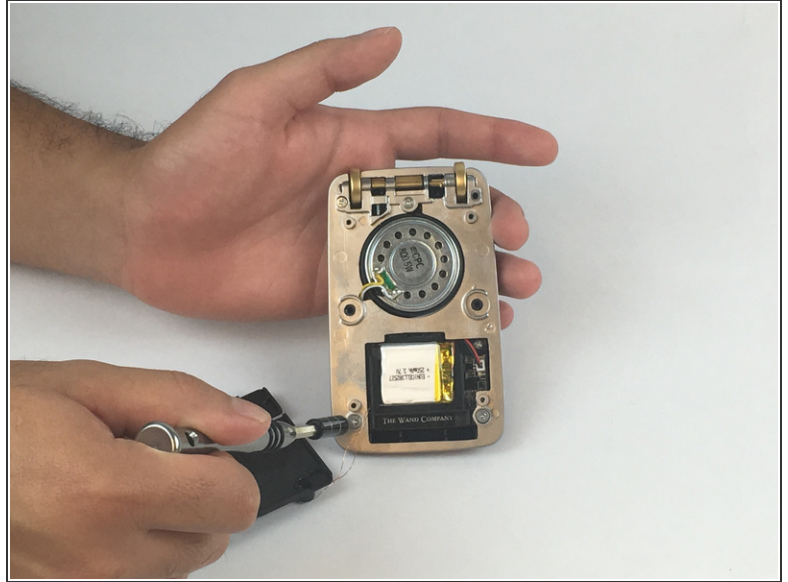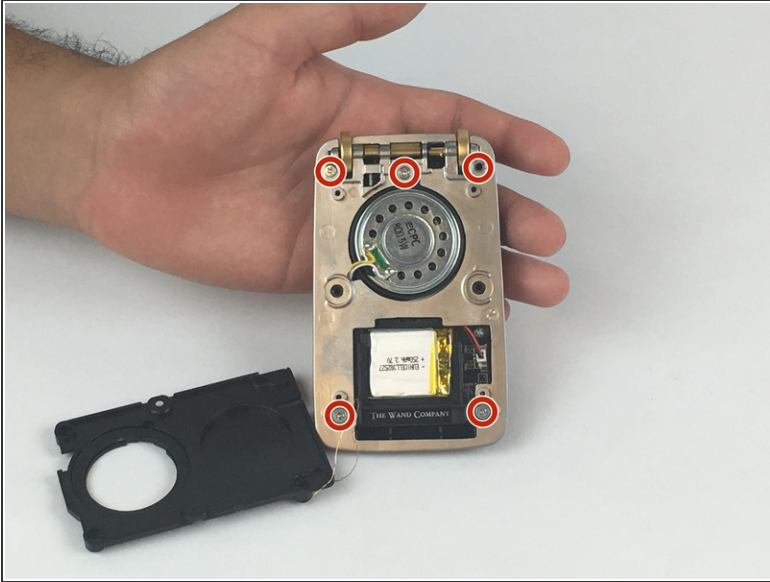

- Remove the five Phillips PH0 (0.9mm) screws located at the top and bottom of the silver plate.

## Step 8



- Remove the silver plate.

To reassemble your device, follow these instructions in reverse order.

